 


5 STEPS TO CHANGING THE WATER IN YOUR HOT TUB


1

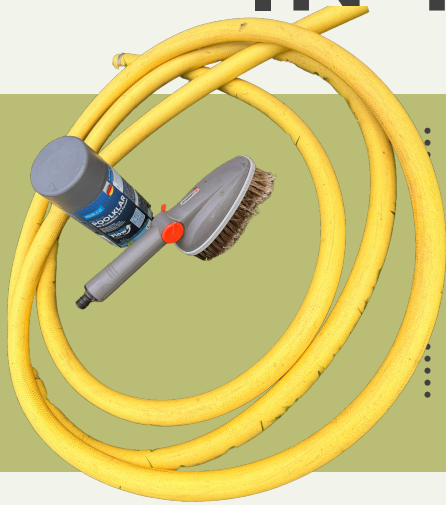

PREPARATION

In the **wooden storage cabinet** directly next to the house, you will find: a yellow drain hose, a garden hose for refilling, a hose brush and a garden spray nozzle for cleaning, and (if needed) "Poolklar" for water treatment.

2

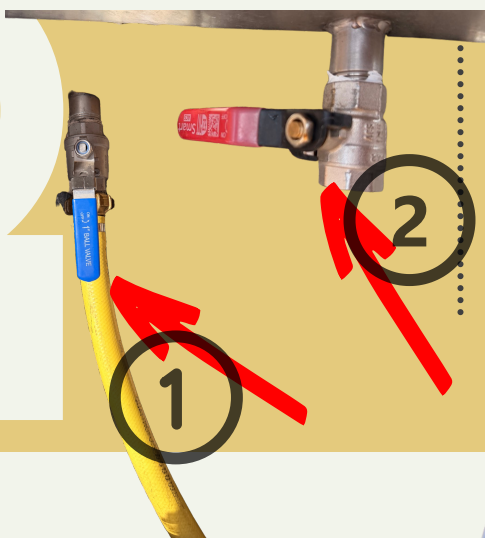

DRAIN

Connect the yellow hose to the hot tub's external drain valve. First, open the **blue valve** on the hot tub and let the water drain down the slope. Once the hot tub is empty, open the **red valve** to drain the remaining water from the stove into the gravel bed.


3



CLEAN

Thoroughly rinse the hot tub using the garden spray nozzle, then **scrub the entire tub** with the hose brush. Also rinse the **jets and water inlets** thoroughly to flush out any deposits or buildup.

4

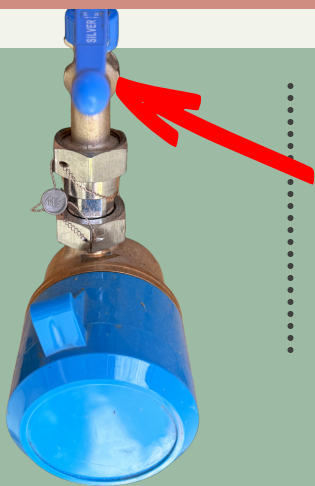

REFILL

Disconnect the yellow drain hose and close both valves on the hot tub. Using the garden hose (open the valve in the utility cabinet), fill the hot tub until the water level is approximately 15 cm (6 inches) below the rim. If needed, add one small measuring cup (5–10 ml) of "**Poolklar**" to the water. **Tip:** Filling the hot tub takes approximately **70 minutes**. **SET A TIMER!**



5



CLEAN UP

Close the water supply valve and always return all hoses and cleaning equipment to the utility cabinet when you're finished. Lock the cabinet before leaving. **Never leave the hose outside.**

! WARNING: Make sure the hot tub is completely filled with water before heating it. Heating a partially filled hot tub can damage the stove and create a serious fire hazard! **!**