
I.H.S

INTERNATIONAL HYDRAULIC SUPPLY

MOLIVER 17 STR., P.O.BOX 626, ISRAEL 58105 TEL: 972-3-5562390, FAX: 972-3-5569186 אספקה הידראולית בינלאומית מוהליבר 17, ת.ד 626, חולון, מיקוד 58105 טלי: 03-5562390, פקסי: 03-5562390

e-mail: ihsil@hotmail.com,www.ihs-il.dpages.co.il

EZ-LAB bottle oil sampling test with **EZ-OilClean** Check

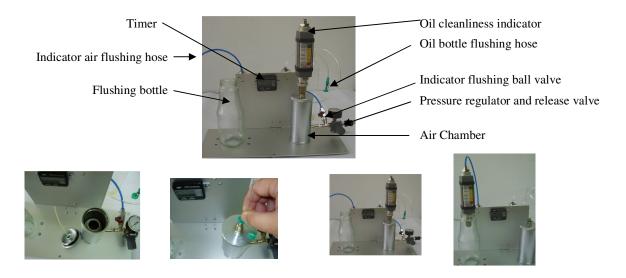

EZ-LAB is a stationary basis for testing oil cleanliness levels and oil viscosity from bottle oil samples, using **EZ-OilClean Check Indicator** and **EZ-Visco Check Indicator**.

EZ-LAB is used for testing oil samples at room temperature.

EZ-LAB can be installed in any room, using compressed central air line or a small compressor. Oil sample bottle is introduced into an Air Chamber and pressurized air at 4bars presses the oil inside the **EZ-OilClean Check Indicator** and test begins.

EZ-LAB uses 100ml bottles for test. Oil samples can be taken from oil reservoirs, oil sampling test points, filtration carts, oil tanks, lubrication lines

Dant Muse ban

Specifications

Connection to pressurized air supply of 10bar max.

Ordering Information

Decemination

<u>Description</u>	Part Number
EZ-LAB Unit(including EZ-OilClean Check Indicator)	I H S-OC-LAB
EZ-Visco Check Indicator Kit(option)	I H S-VI-KIT